


四、(User notice)

1. According to installment sample sheet, draw correct lines in the appropriate height on the door and dig holes.
2. After installing the cylinder, please don't close the paint and easy corrosive goods when installing panels and handles.
3. Please install according to the sketch map. If the damage lies in worry installment, our factory wouldn't undertake any responsibility.

The installation sample

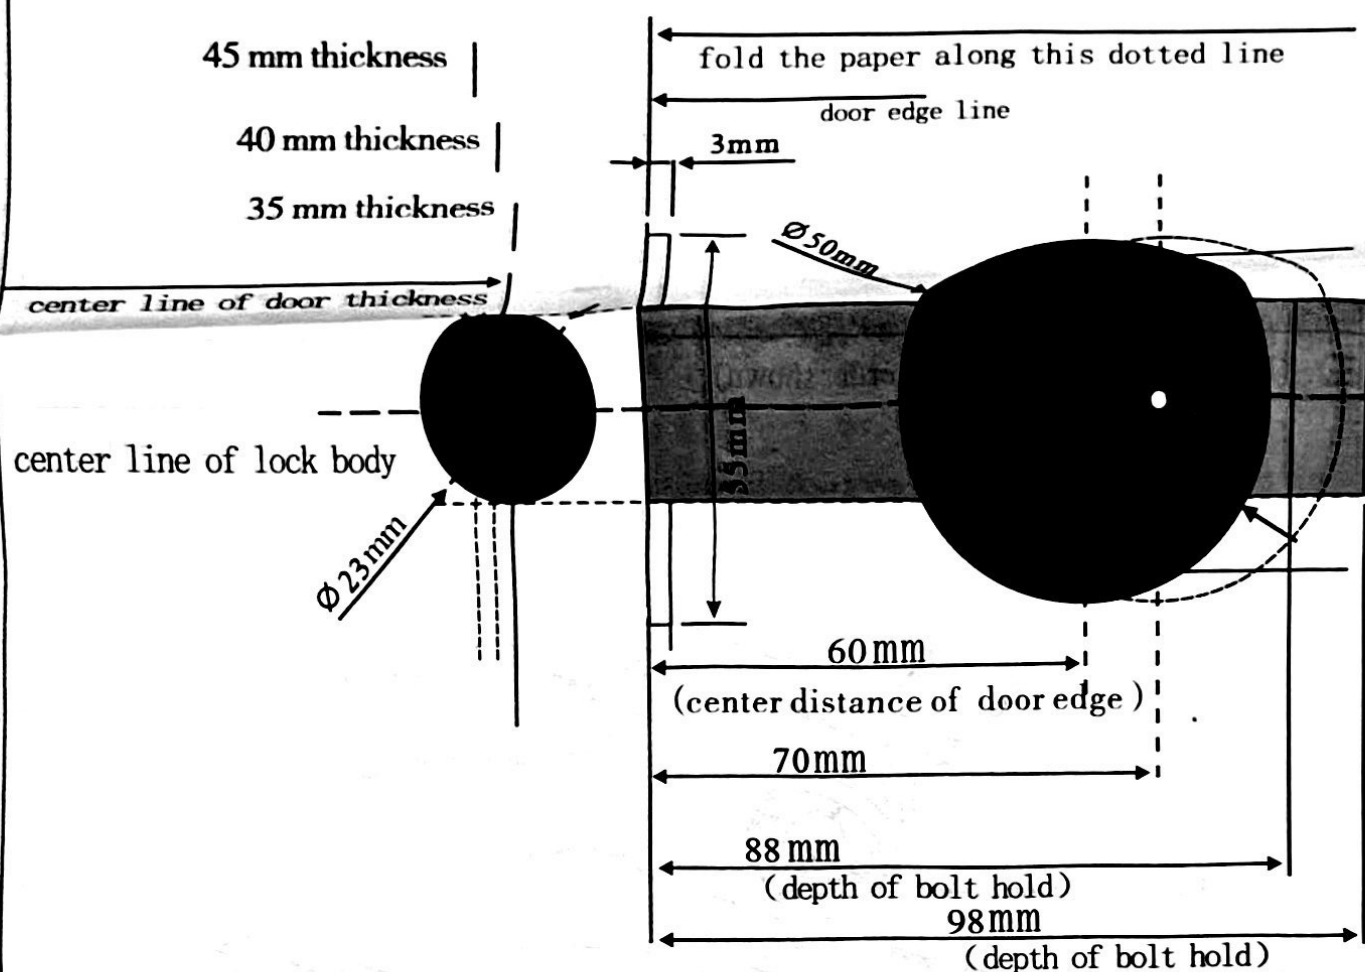

Remark: the installation blueprint just for reference. Please dig hole according to the proportion of actual product.


Installation Manual of three-lever fingerprint lock

一. (Product special characteristic:)

This product uses international latest design, selects the highest quality material (as import resin) and passes the high precise galvanization and strict technique of production and quality control, so the quality and performance of the product is excellent. Product are kinds of styles, including rich artistic, natural, fashionable and noble elegant, and fast attire does not destroy door and other characteristics. This product can apply to the door thickness from 40mm To 60mm

二. (Adjustable lock profit)

The center distance of 60mm can be adjusted and shifted outward by 10mm with square steering to become 70mm center distance

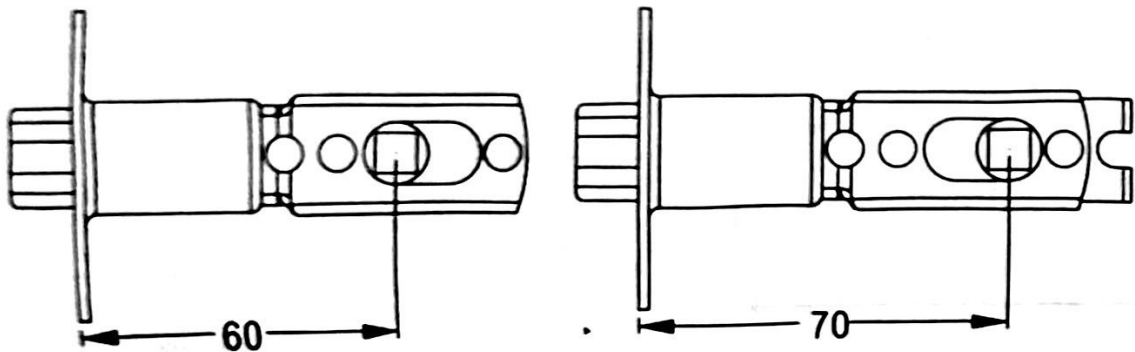

三. (Install the door locks in the order shown)

(Installation blueprint)

